

IMPORTANT INSTRUCTIONS - OPERATING MANUAL

ENERGY STAR® Advantage
Professional Series



Range Hood

READ AND SAVE THESE INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED. PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

GENERAL SAFETY INFORMATION

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to person, including the following:

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSON, OBSERVE THE FOLLOWING:

- a) Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- b) Before servicing or cleaning the unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSON, OBSERVE THE FOLLOWING:

- a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-related construction.
- b) Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA) and the American Society for Heating, Refrigeration, and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- c) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

CAUTION: TO REDUCE THE RISK OF FIRE AND TO PROPERLY EXHAUST AIR, BE SURE TO DUCT AIR OUTSIDE - DO NOT VENT EXHAUST AIR INTO SPACES WITHIN WALLS OR CEILINGS OR INTO ATTICS, CRAWL SPACES, OR GARAGES.

- d) Ducted fans must always be vented to the outdoors.
- e) This unit must be grounded.
- f) To avoid motor bearing damage and noisy and/or unbalanced impellers, keep drywall spray, construction dust, etc. off power unit.
- g) Read all instructions before installing or using exhaust fan.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.

WARNING: TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:

- a) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- b) Always turn hood ON when cooking at high heat or when flambéing food (ie. Crepes Suzette, Cherries Jubilee, Peppercorn Beef Flambé).
- c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan filter.
- d) Use proper pan size. Always use cookware appropriate for the size of the surface element.

WARNING: TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING:

- a) SMOTHER FLAMES with a close-fitting lid, cookie sheet, or metal tray, then turn off burner. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT.
- b) NEVER PICK UP A FLAMING PAN - You may be burned.
- c) DO NOT USE WATER, including wet dishcloths or towels - a violent steam explosion will result.
- d) Use an extinguisher ONLY if:
 - I. You know you have a Class ABC extinguisher, and you already know how to operate it.
 - II. The fire is small and contained in the area where it started.
 - III. The fire department is being called.
 - IV. You can fight the fire with your back to an exit.

WARNING: TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCTWORK.

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

CAUTION: MAKE SURE POWER IS SWITCHED OFF AT SERVICE PANEL BEFORE STARTING INSTALLATION.


SECTION 1

Preparing the Range Hood

1. Unpack hood from the carton and confirm that all pieces are present. In addition to the range hood you should have:
 - 1 - Package containing:
 - 3 - 2" wood screws
 - 8 - 3/4" wood screws (36" models: 12)
 - 4 - wall anchors (36" models: 6)
 - 2 - Grease Filters
 - 2 - Fluorescent Lamps
 - 1 - Wood mounting strip
 - 1 - Instruction/Safety Sheet

NOTE: Some hoods may be shipped with a protective plastic adhered to the range hood. It is recommended to leave this in place during installation to protect the hood from scratching. Remove when the installation is complete.

2. Remove the wood mounting strip attached to the back of the hood and place in a secure place. You will need this strip later (Figure 1).

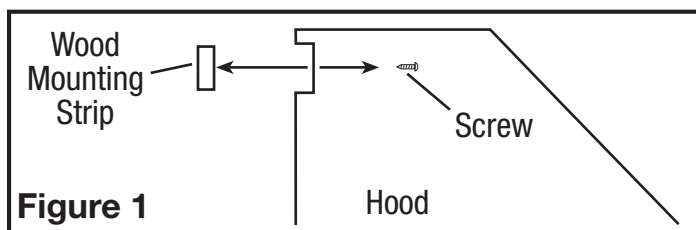

CAUTION: MAKE SURE POWER IS SWITCHED OFF AT SERVICE PANEL BEFORE STARTING INSTALLATION.


CAUTION: WHEN CUTTING OR DRILLING INTO WALL DO NOT DAMAGE ELECTRICAL WIRING AND OTHER HIDDEN UTILITIES.

SECTION 2

Measuring the Hood Installation

NOTE: Before installing any parts or marking locations, make sure you have decided how your ducting will be installed. You may need to modify the wall structure as described in Section 5 Wall Mounted Canopy Installation or Section 6 Under Cabinet Canopy Installation.

1. The measurements for the installation will be custom to your specific location and will be dependent upon exact ceiling height, distance mounted from cooking surface, cabinet or soffit heights, along with other factors and will need to be adjusted accordingly. The hood must be mounted a minimum of 24" and a maximum of 36" from the cooking surface (Figure 2).

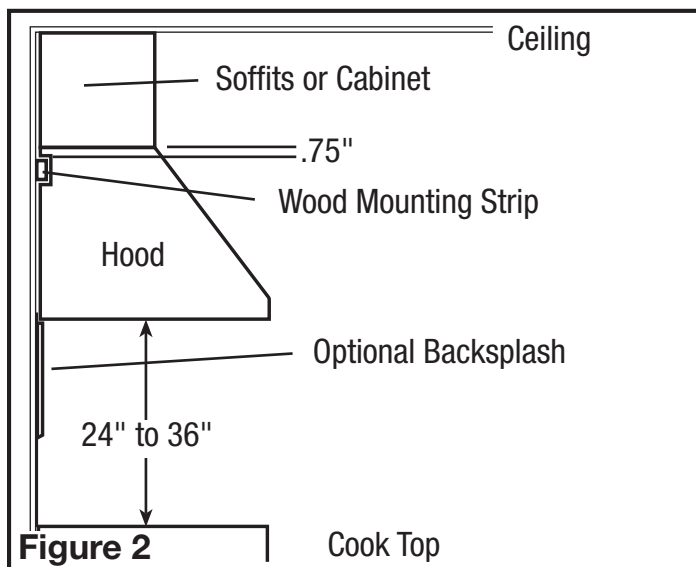


NOTE: When determining the height of the canopy from the cooking surface, be sure to take into consideration items such as back splashes with shelves and other accessories that might need more clearance under the canopy.


SECTION 3

Measuring the Installation

1. Determine where the top of the hood will be located within your installation (Figure 3).

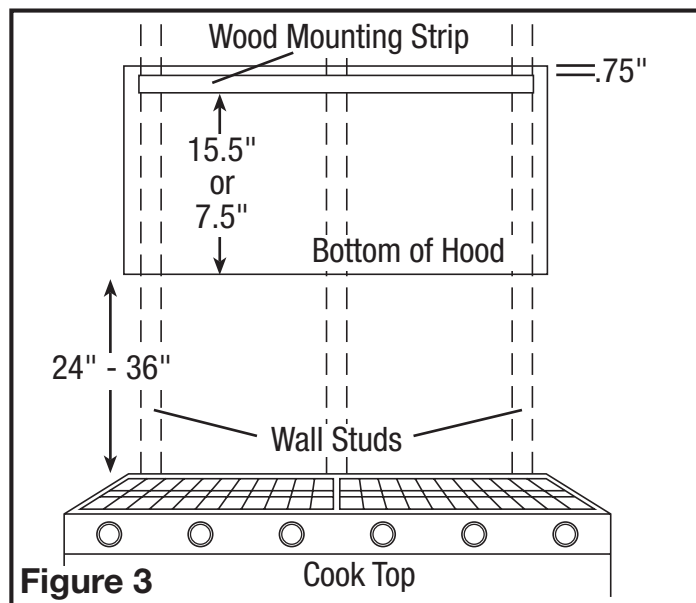


2. Attach the wood strip that was removed in Section 1 Step 2 in place and confirm it is level. Secure in place using the provided 2" mounting screws making sure the screws are fastening into the wall studs (Figure 4).

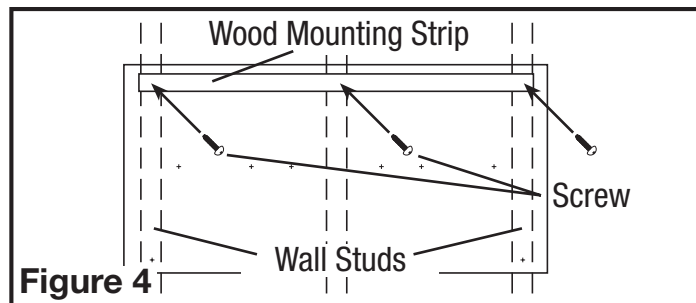

CAUTION: DUE TO THE WEIGHT OF THE HOOD, ENSURE THE WOOD STRIP IS FASTENED TO ALL AVAILABLE WALL STUDS (A MINIMUM OF 2 STUDS FOR 30" HOODS, MORE AS THE WIDTH INCREASES) NOT INTO THE DRYWALL ALONE.

CAUTION: SUPPORT THE HOOD UNTIL IT IS FULLY INSTALLED ONTO THE WOOD MOUNTING STRIP.

3. Rest the cavity in the back side of the hood on the wood strip and mark drilling locations on the wall for wall anchors on the bottom rear of the hood then remove hood and install wall anchors (Figure 5).

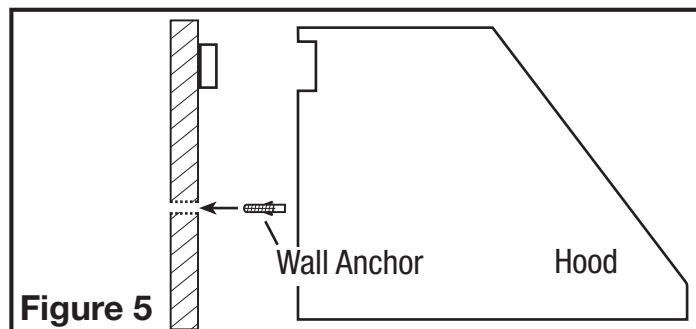

SECTION 4

Installing Backsplash

1. If an optional BS Series backsplash will be utilized, this must be installed before the hood canopy because the hood canopy will cover the backsplash mounting screws. Refer to the instructions included with the backsplash for installation.


SECTION 5

Wall Mounted Canopy Installation

CAUTION: ALL DUCTING MUST COMPLY WITH LOCAL AND NATIONAL BUILDING CODES.

WARNING: TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCTWORK.


1. Determine the type of ducting you will require (Figure 6).

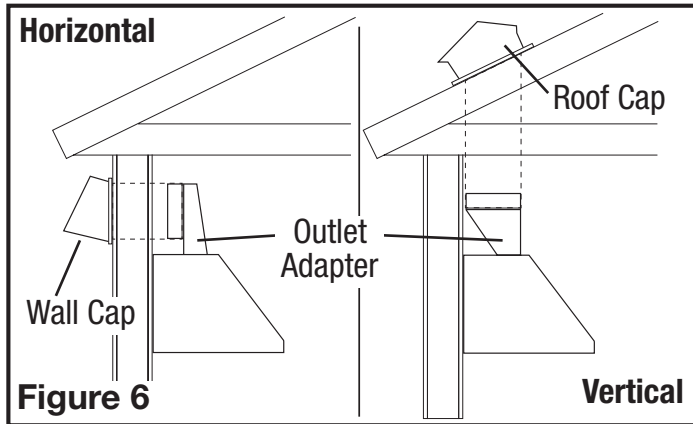

NOTE: A minimum of a 8" diameter outlet adapter & ducting is required to achieve the proper air flow.


NOTE: When the duct termination is similar to that shown in Figure 6 (passing through the wall to which the hood is mounted) the installation requires special consideration. Depending upon where the wall studs are located, it may be necessary to cut one or more of the wall studs and install a header and footer to transfer the load to the adjacent studs. Additional studs may need to be framed into the opening to attach dry wall or secure the hood. If this is your situation Air King recommends that you hire a professional and comply with all applicable codes.

2. Install the proper sized outlet adapter (available separately) to the hood by matching up the four holes on the flange of the adapter to the four corresponding holes on the hood and secure in place with the provided screws. Ensure an airtight seal around the adapter by securing all connections with ducting tape (Figure 7).

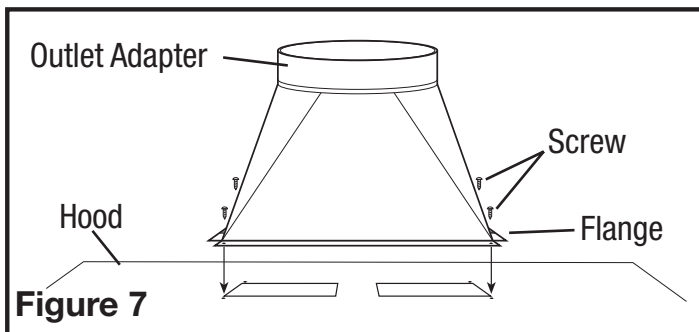


NOTE: If the recommended, optional BS Series backsplash is being installed it must be installed before the hood canopy because the hood canopy will cover the backsplash mounting screws. Refer to the instructions included with the backsplash for complete installation instructions.

3. Rest the cavity in the back side of the hood on the wood strip and secure hood to wood strip with the included 3/4" screws through the holes in the back of the hood that line up with the wood strip (use 6 screws for 30" and 36" widths and 8 screws for larger widths) Secure the bottom of the hood by installing the screws provided into the wall anchors (Figure 8).

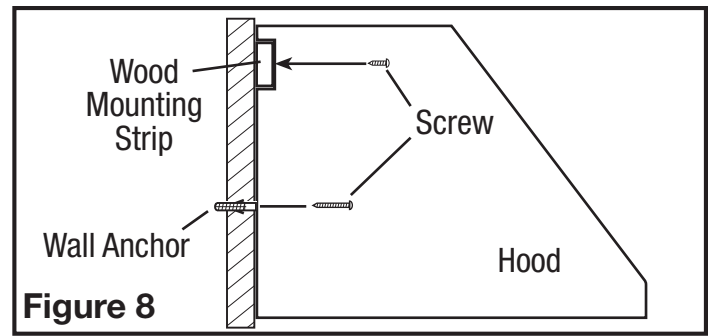


4. Connect the ducting to the outlet adapter and damper. Secure in place using tape to seal all joints (Figure 9).

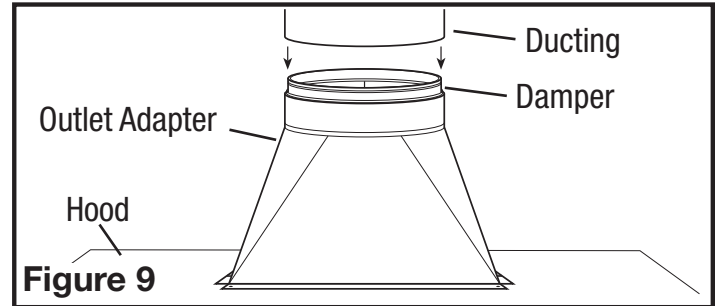


SECTION 6

Under Cabinet Canopy Installation

1. If the canopy will be installed under cabinets that have a recessed bottom, it will be necessary to install wood mounting strips (not included) so the canopy will mount properly (Figure 10).

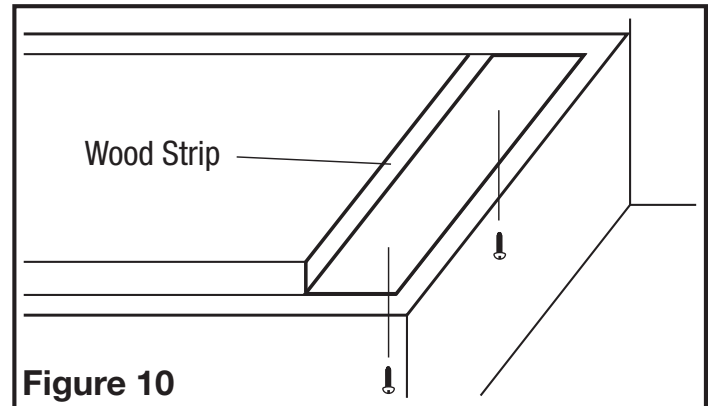


2. The thickness of the strips should be the same as the recess of the cabinet and they should be approximately 2" wide.
3. Install the strips using appropriate length wood screws (not included). Make sure the strips line up to the holes in the top of the canopy.
4. Mark the location where the outlet adapter (available separately) will be located on the cabinets and cut a hole approximately 1" larger on all sides than the outlet adapter (Figure 11).

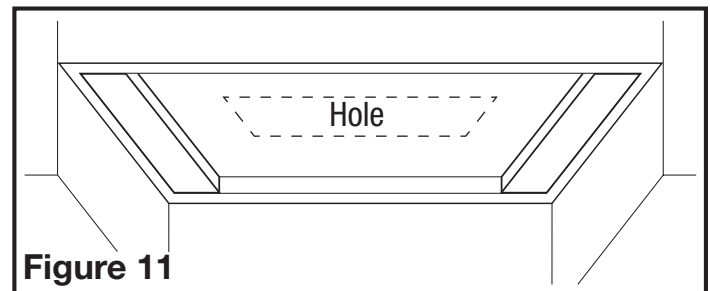

NOTE: If the recommended, optional BS Series backsplash is being installed, use the template to locate and drill the appropriate holes for mounting. The back splash must be installed before the hood canopy because the hood canopy will cover the backsplash mounting screws. Refer to the instructions included with the backsplash for complete installation instructions.

- Rest the cavity in the back side of the hood on the wood strip and secure hood to wood strip with the included 3/4" screws through the holes in the back of the hood that line up with the wood strip (use 6 screws for 30" and 36" widths and 8 screws for larger widths) Secure the bottom of the hood by installing the screws provided into the wall anchors (Figure 12).

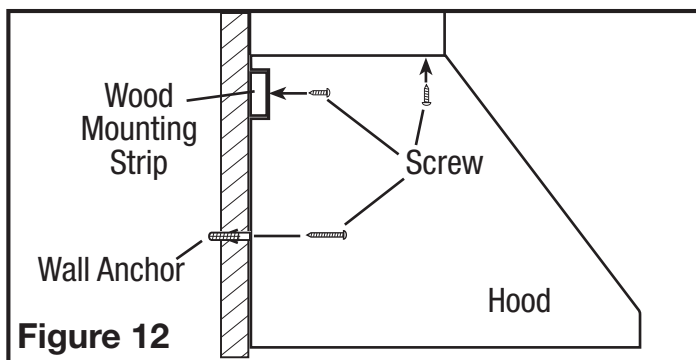


- From inside the hood canopy, secure hood to the underside of the cabinet by using four wood screws (not included) through the keyhole slots of the hood (Figure 12).

CAUTION: ALL DUCTING MUST COMPLY WITH LOCAL AND NATIONAL BUILDING CODES.

WARNING: TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCTWORK.

- Determine the type of ducting you will require (Figure 13).

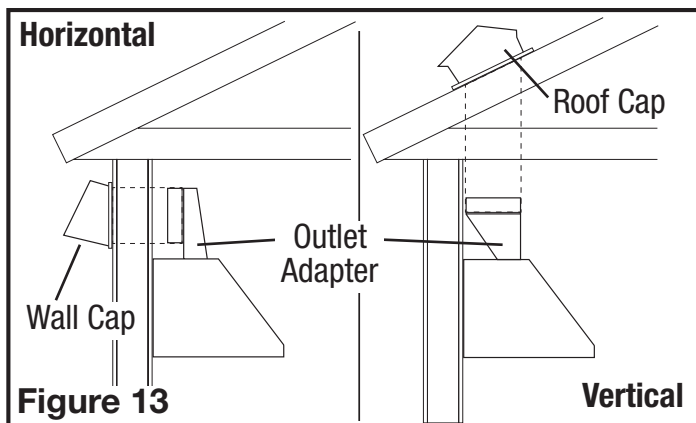


NOTE: A minimum of a 8" diameter outlet adapter & ducting is required to achieve the proper air flow.


NOTE: When determining the outlet adapter to be used, make sure to consider the clearance within the cabinet space. Typically a horizontal Outlet Adapter will need to be used if you will be venting out to a wall cap.

NOTE: When the duct termination is similar to that shown in Figure 13 (passing through the wall to which the hood is mounted) the installation requires special consideration. Depending upon where the wall studs are located, it may be necessary to cut one or more of the wall studs and install a header and footer to transfer the load to the adjacent studs. Additional studs may need to be framed into the opening to attach dry wall or secure the hood. If this is your situation Air King recommends that you hire a professional and comply with all applicable codes.

- Install the proper sized outlet adapter (available separately) to the hood by sliding it down into the hole cut earlier and matching up the four holes on the flange of the adapter to the four corresponding holes on the hood and secure in place with the provided screws. Ensure an airtight seal around the adapter by securing all connections with ducting tape (Figure 14).

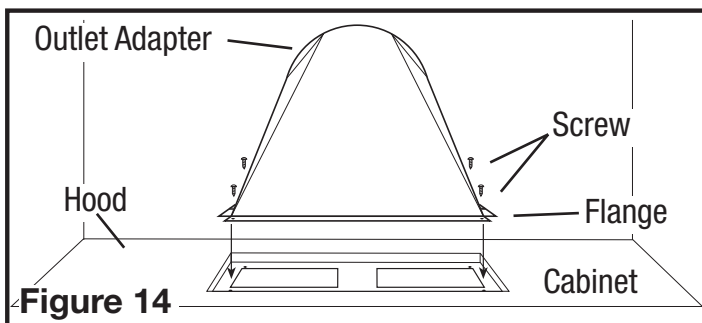

- Connect the ducting to the outlet adapter and damper. Secure in place using tape to seal all joints (Figure 15).


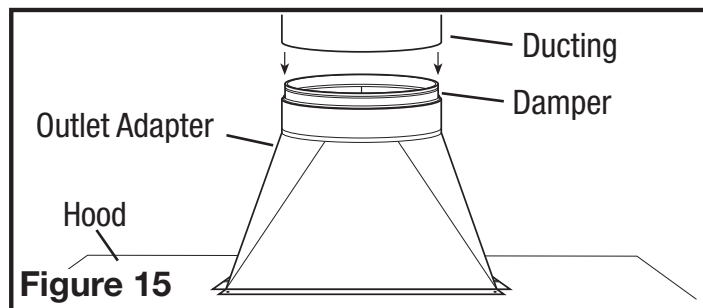


SECTION 7

Wiring

CAUTION: ALL ELECTRICAL CONNECTIONS MUST BE MADE IN ACCORDANCE WITH LOCAL CODES, ORDINANCES, OR NATIONAL ELECTRICAL CODE. IF YOU ARE UNFAMILIAR WITH METHODS OF INSTALLING ELECTRICAL WIRING, SECURE THE SERVICES OF A QUALIFIED ELECTRICIAN.

- Remove the two wire compartment cover screws to gain access into the wire compartment (Figure 16). Connect the white wire from the range hood to the white wire from the supply, and the black wire from the range hood to the black wire of the supply. Connect the ground wire from the home (green or bare) to the ground wire (green) from the hood. Use approved methods for all connections (Figure 17).
- Replace the wire compartment cover and tighten screws. Make sure all wiring is securely contained within the wire compartment. If the quick connect wire connector was removed from the receptacle, replace. The connector will only fit one way into the receptacle (Figure 16).

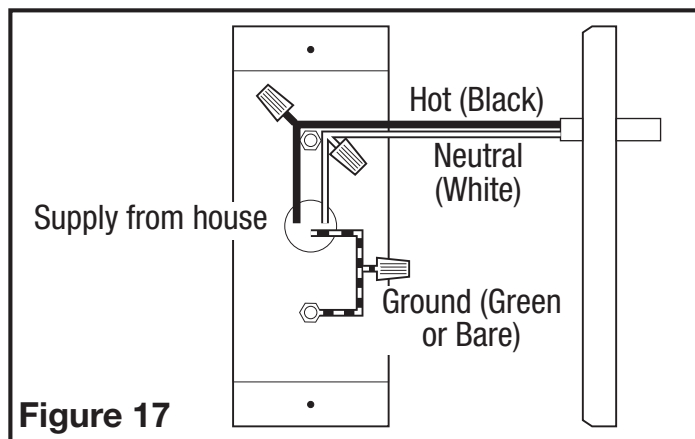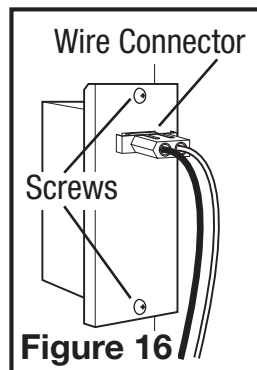

SECTION 8

Installing the Blower

- Refer to the instructions included with the blower for installation.

SECTION 9

Installing the Optional Soffits

- Refer to the instructions included with the specific soffit(s) you have chosen for installation.

SECTION 10


Finishing the Installation

- Install the proper lighting for your specific unit:

Fluorescent Lamps: Use 18 watt, GU24 Bulb. Install by removing the snap fit lens and inserting the bulb into the socket and turning the bulb clockwise to snap it into place.

Night Lights: Use 4 watt, candelabra style bulb. Install by removing the snap fit lens and inserting bulb into socket and turning clockwise until bulb is firmly seated. DO NOT over tighten.

2. Install the grease filters by inserting the bottom of the filter into the bottom channel of the hood compressing the spring, then slide the top of the filter into the top channel of the hood (**Figure 18**).

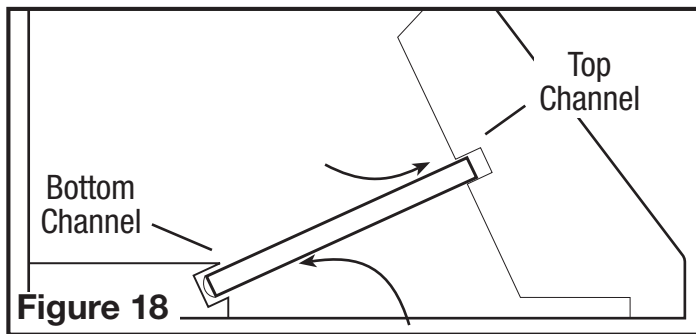


SECTION 11

Operation

Controls

Your Range Hood is equipped with two rotary switches with one controlling the lighting and the other controlling the exhaust fan blower. The light switch has three positions, High, Low, and Off. The fan switch has four positions, Off, High, Medium, and Low (**Figure 21**).

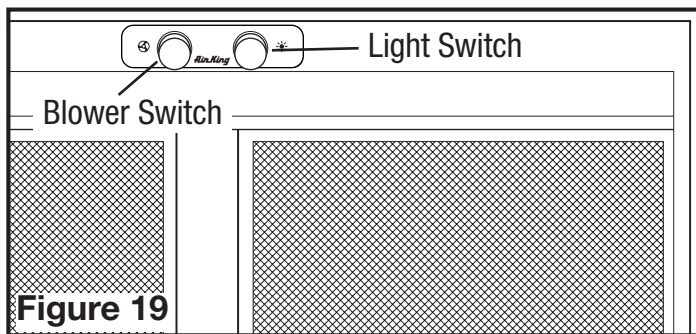

SECTION 12

Maintenance

CAUTION: MAKE SURE POWER IS SWITCHED OFF AT SERVICE PANEL BEFORE SERVICING THE UNIT.

Grease Filters

Included with your range hood are grease filters along with a grease trough that should be washed at least once a month. The grease filters are dishwasher safe and should be washed in a mild soap or detergent. Reverse the instruction in **SECTION 10** *Finishing the Installation*, to remove the grease filters and trough. If the grease filters become damaged, replace with Air King Models:

APF1030: Model GF1030 Grease Filters

APF1036: Model GF1036 Grease Filters

APF1830: Model GF1830 Grease Filters

APF1836: Model GF1836 Grease Filters

CAUTION: ALLOW BULB TO COOL BEFORE REPLACING.

Changing the Lamps

Remove the lamp cover on the underside of the hood and remove the lamp by turning it counter-clockwise at the base. Replace with Air King model 18W GU24 lamp or a compatible 18W GU24 lamp.

Fuse

To replace the fuse, turn the fuse cap located next to the wire connector counter clockwise and pull out. Replace with a Bussman MDA-3 or equivalent 125-Volt, 3 Amp Max. fuse. Reinstall the fuse back into the hood.

Cleaning

CAUTION: DO NOT USE GASOLINE, BENZINE, THINNER, HARSH CLEANSERS, ETC., AS THEY MAY DAMAGE THE RANGE HOOD.

1. Clean your range hood with a mild detergent, such as dishwashing liquid, and dry with a soft cloth. **NEVER USE ANY ABRASIVE PADS OR SCOURING POWDERS.** Completely dry before restoring power. **NEVER IMMERSE ELECTRICAL PARTS IN WATER.**
2. The blower assembly can be vacuumed when build up (dirt, lint, etc.) accumulates over time. The blower is permanently lubricated and does not require oiling.

LIMITED WARRANTY

WHAT THIS WARRANTY COVERS: This product is warranted against defects in workmanship and/or materials.

HOW LONG THIS WARRANTY LASTS: This warranty extends only to the original purchaser of the product and lasts for five (5) years from the date of original purchase or until the original purchaser of the product sells or transfers the product, whichever first occurs.

WHAT AIR KING WILL DO: During the warranty period, Air King will, at its sole option, repair or replace any part or parts that prove to be defective or replace the whole product with the same or comparable model.

WHAT THIS WARRANTY DOES NOT COVER: This warranty does not apply if the product was damaged or failed because of accident, improper handling or operation, shipping damage, abuse, misuse, unauthorized repairs made or attempted. This warranty does not cover shipping costs for the return of products to Air King for repair or replacement. Air King will pay return shipping charges from Air King following warranty repairs or replacement.

ANY AND ALL WARRANTIES, EXPRESSED OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY), LAST ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE OR UNTIL THE ORIGINAL PURCHASER OF THE PRODUCT SELLS OR TRANSFERS THE PRODUCT, WHICHEVER FIRST OCCURS AND IN NO EVENT SHALL AIR KING'S LIABILITY UNDER ANY EXPRESS OR IMPLIED WARRANTY INCLUDE (I) INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM ANY CAUSE WHATSOEVER, OR (II) REPLACEMENT OR REPAIR OF ANY HOUSE FUSES, CIRCUIT BREAKERS OR RECEPTACLES. NOTWITHSTANDING ANYTHING TO THE CONTRARY, IN NO EVENT SHALL AIR KING'S LIABILITY UNDER ANY EXPRESS OR IMPLIED WARRANTY EXCEED THE PURCHASE PRICE OF THE PRODUCT AND ANY SUCH LIABILITY SHALL TERMINATE UPON THE EXPIRATION OF THE WARRANTY PERIOD.

Some states and provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so these exclusions or limitations may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state and province to province. Proof of purchase is required before a warranty claim will be accepted.


CUSTOMER SERVICE:

Troubleshooting Guide

Trouble	Probable Cause	Suggested Remedy
1. Hood does not operate when the switch is on.	1a. A fuse may be blown or a circuit tripped. 1b. Wiring is not connected properly.	1a. Replace fuse or reset circuit breaker. 1b. Turn off power to unit. Check that all wires are connected.
2. Hood is operating, but air moves slower than normal.	2. Obstruction in the exhaust ducting.	2. Check for any obstructions in the ducting including filter.
3. Hood is making a rattling noise.	3a. Filters are loose. 3b. Duct connection is loose. 3c. Damper is stuck.	3a. Turn off power to unit. Check that all filter screws are fully tightened. 3b. Turn off power to unit. Check that duct connection is tight. 3c. Turn off power to unit. Check that the damper is opening freely.


All 18" High Models

#	Qty.	Description	Replacement Part #
1	1	Wire Box	5S1138002
2	1	Main Wire	5S1138003
3	1	Cabinet - 30" models	5S1138630
	1	Cabinet - 36" models	5S1138640
4	1	Grease Tray - 30"	5S1138230
	1	Grease Tray - 36"	5S1138240
5	3	Grease Filter 30" models	5S1138010
	3	Grease Filter 36" models	5S1138011
6	1	Fan Switch with Harness	5S1138004
7	1	Light Switch with Harness	5S1138005
8	1	Name Plate	5S1142010
9	2	Knob	5S1142011
10	1	Internal Panel 30" models	5S1138730
	1	Internal Panel 36" models	5S1138740
11	1	Sub Wire Harness without Lamp	5S1138007
12	1	Wire Harness	5S1138008
13	1	Front Panel APF1830	5S1138830
	1	Front Panel APF1836	5S1138840
14	2	Night Light Harness	5S1138009
15	2	GU24 Lamp Holder	5S1199703
16	2	FL Lamp 18 watt	5S1999718
17	2	Lens Cover	5S1112011

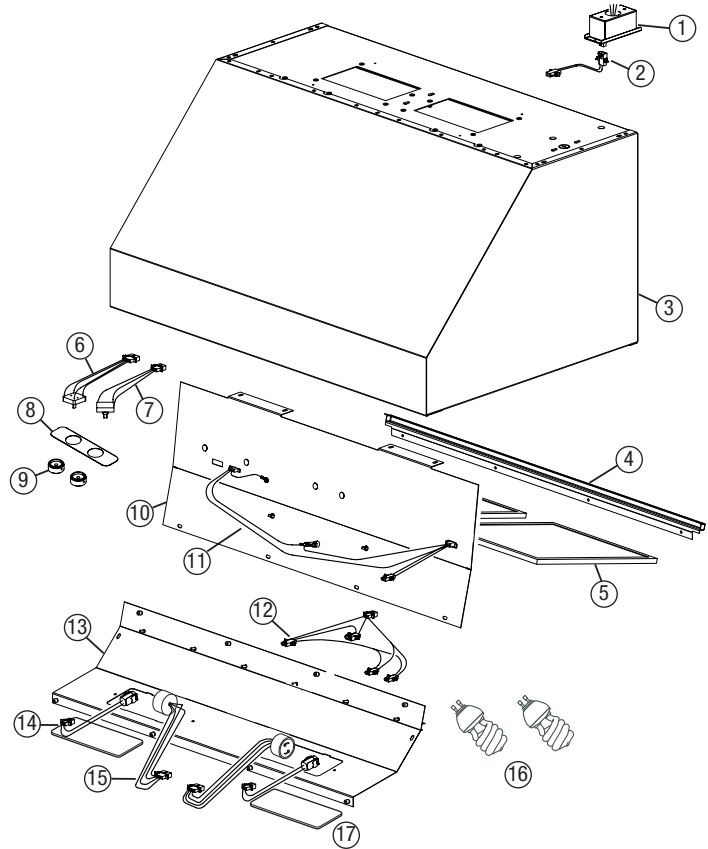

All 10" High Models

#	Qty.	Description	Replacement Part #
1	1	Wire Box	5S1138002
2	1	Main Wire	5S1138003
3	1	Cabinet - 30" models	5S1138030
	1	Cabinet - 36" models	5S1138040
4	1	Rear Panel 30" models	5S1138130
	1	Rear Panel 36" models	5S1138140
5	1	Grease Tray - 30"	5S1138230
	1	Grease Tray - 36"	5S1138240
6	3	Grease Filter 30" models	5S1138330
	3	Grease Filter 36" models	5S1138340
7	1	Fan Switch with Harness	5S1138004
8	1	Light Switch with Harness	5S1138005
9	1	Name Plate	5S1142010
10	2	Knob	5S1142011
11	1	Internal Panel 30" models	5S1138430
	1	Internal Panel 36" models	5S1138440
12	1	Sub Wire Harness without Lamp	5S1138007
13	1	Wire Harness	5S1138008
14	1	Front Panel APF1030	5S1138530
	1	Front Panel APF1036	5S1138540
15	2	Night Light Harness	5S1138009
16	2	GU24 Lamp Holder	5S1199703
17	2	FL Lamp 18 watt	5S1999718
18	2	Lens Cover	5S1112011

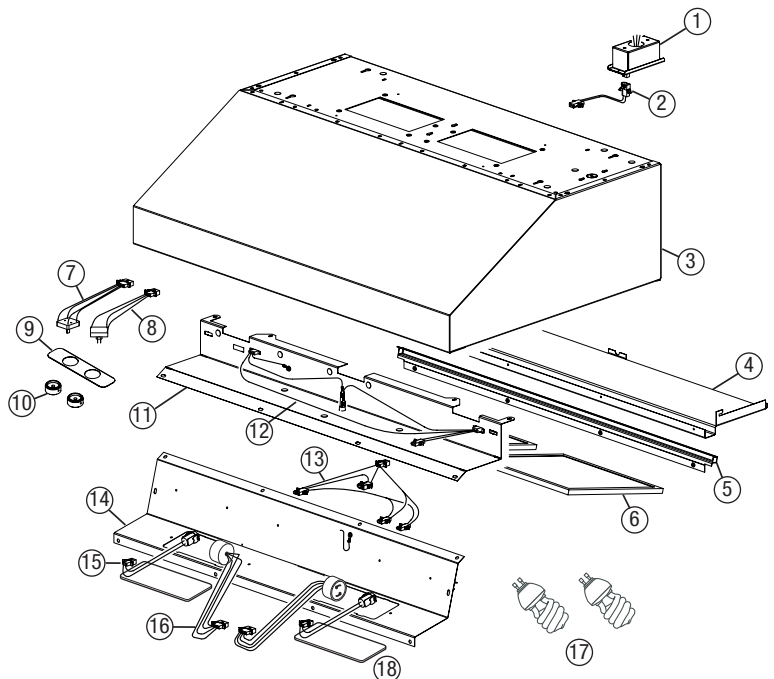

Installer: _____

Installation Date: _____

Place of Purchase: _____

Model Number: _____